










How to read the table: Find your desired sample storage tube or sample storage rack and see which rack/tube, rack cover and cap is compatible.

Rack Type →	Loborack -96			Roborack -96			Comorack -96	Micronic 96-1		Micronic 96-Q1		Micronic 96-2		Micronic 96-3		Micronic 96-4		Micronic 96-5		
Tube Size ↓																				
Cover Type →	High	Standard	Low	High	Standard	Low	Standard	High	Low	High	Low	High	Low	High	Low	High	Low	High	Low	
0.30ml External Thread									Screw Cap + Push Cap											
0.40ml External Thread								Screw Cap + Push Cap												
0.50ml Internal Thread		Screw Cap	Push Cap*						Push Cap*	Screw Cap	Push Cap*									
0.75ml Internal Thread	Screw Cap	Push Cap*										Screw Cap	Push Cap*							
0.75ml External Thread (Hybrid)												Screw Cap + Push Cap								
0.80ml External Thread															Screw Cap + Push Cap					
1.10ml Internal Thread					Screw Cap	Push Cap*								Screw Cap	Push Cap*					
1.10ml External Thread														Screw Cap + Push Cap						
1.40ml Round Bottom (No Thread)					Push Cap		Push Cap										Push Cap			
1.40ml Internal Thread				Screw Cap	Push Cap*		Push Cap									Screw Cap	Push Cap*			
1.40ml External Thread (Hybrid)																Screw Cap + Push Cap				
2.00ml Internal Thread																		Screw Cap	Push Cap*	
2.00ml External Thread																		Screw Cap + Push Cap		
2.50ml Round Bottom (No Thread)**				Push Cap																

\*Or Low Profile Screw Cap.

\*\* For the 2.50ml Round Bottom Tube the Rack Cover is Extra High.

**Micronic Europe**  
 (Asia, Africa, Europe, Oceania)  
 Tel: +31 (0)320 277070

**Micronic America**  
 (North, Central and South America)  
 Tel: +1 484 480 3372

E-mail: [sales@micronic.com](mailto:sales@micronic.com)  
[www.micronic.com](http://www.micronic.com)